 



INSTRUCTIONS

GRAVITY INDUCTION TATTOO MACHINE

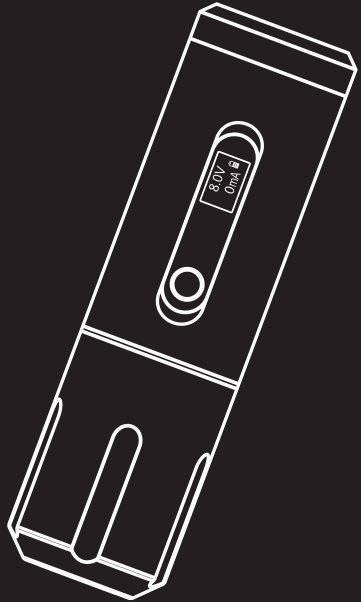

Kindly reminder

 1. Please read the instructions carefully to understand that the performance and operation process are completely available before use.
2. To avoid cross-infection, the needle should be replaced before each use.
3. Use the product correctly, and clean it after the operation.
4. Keep the attachments and instructions for your reference.

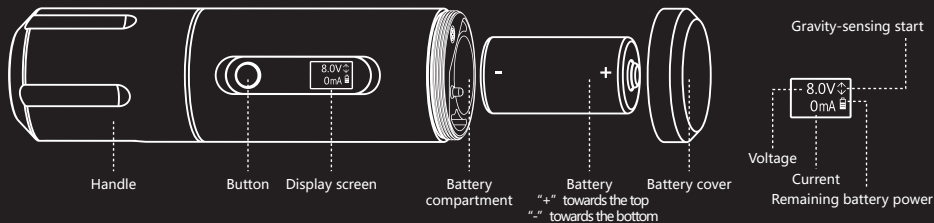

Product Number: YT-01

Product name: Gravity induction Tattoo machine

Start voltage: 8V (Start default)

Needlet travel: 3.5mm

Needle length: 0-4.8mm

Motor specification: Hollow cup motor

Rated voltage: 12V

Rated power: 1.5W

Machine speed: 4375rpm(5V)-10500rpm(12V)

Interface: 4.2V 1100mAH

Battery capacity: 1100mAH

- Product list:**
1. Tattoo machine×1
 2. Battery charging seat (double slot)×1
 - 3.18350 Battery×2
 4. Battery storage box×1
 5. TYPE-C charging line×1
 6. Several sealing rings
 7. Use manual×1

Operating instructions:

1. Power switch: install the battery, long press the 2s power supply to start up, start up the default gear of 8.0V, and turn on at the same time Machine is suspended by default; press switch key to start operation (display voltage always on) , Short press the switch button again to pause (display voltage flicker display), in the pause state, long Press the 2s power supply for shutdown.

2. Shift adjustment: in working state (motor running), continuously press the power key to smooth the pen The needle swing angle exceeds 30°, the voltage output is increasing, and the minimum increment is + 0.1v , The increase and rate increases 4 times per second; the pen is counterclockwise The swing angle exceeds 30°, decreasing: the voltage display range 5.0-12.0v, when the voltage reaches the maximum or maximum After small, no longer continuous increasing or decreasing change, in the gear adjustment process, the voltage gear is solid Changes in time.

 
3. Power display: there is a battery style symbol on the screen, and the number of different cases represents the remaining power respectively 25%、50%、75%、100%.

4. Battery charging: put the battery without electricity into the special 18350 double slot charging seat and connect it For TYPE-C line, access to 5V 2A charging adapter to start charging; when the battery is charged, The indicator light of the card slot of the charging seat shows the red light, always on. After full charge, the green light is always on.

5. Idle misoperation state, and automatic shutdown for 180 seconds

6. With short circuit protection overload protection: when the motor output short circuit or overload, the circuit automatically shut off Source, if to restart, long press the power switch.

Battery charging

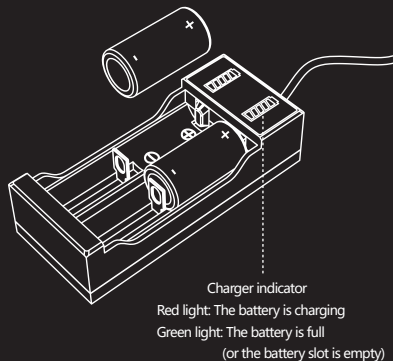

1. Charging adapter input: DCSV 1-2A
2. Charge adapter output: CD4.2V 1000mA
3. Li-polymer battery: 4.2V 1100mAH

Additional features description: (for reference only)

1. battery fully charged lasting life: 5H-7H
2. charging time: ≤ 2.0H